


Figure 1-7. (IWM -11)

Water Penetration and Movement in Sandy and Clay Loam Soils; to Achieve Complete Wetting, Furrows Have to be Closer Together on Sandy Soils.

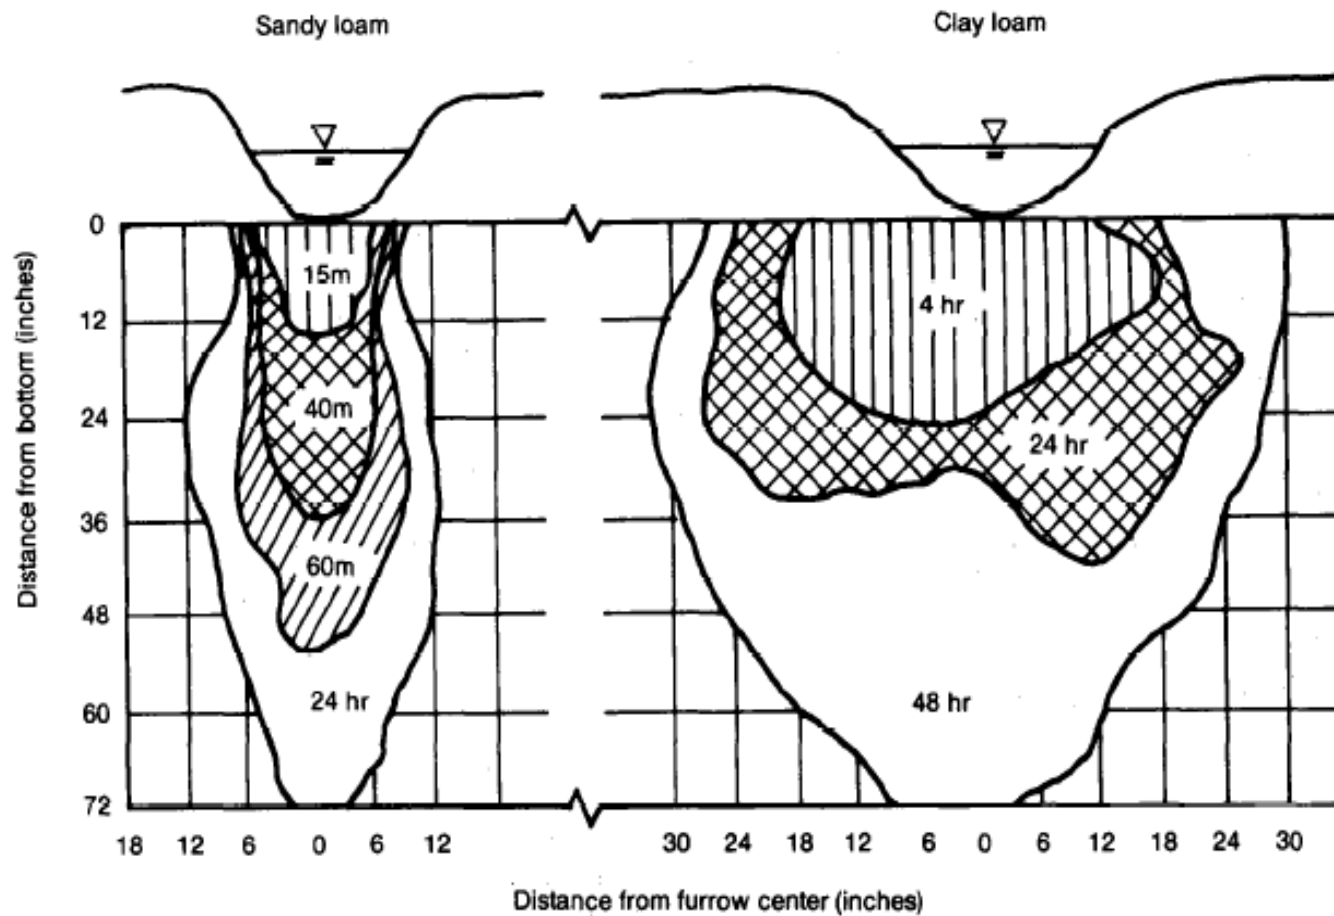

Source: USDA-NRCS National Engineering Handbook, 15-1, Dec. 1991, <http://www.info.usda.gov/CED/ftp/CED/neh15-01.pdf>